


Looped plumbing: The technique works best for creating uniform flow from spray to spray. There is no termination point, so water moves without interruption, sending equal flow to each nozzle.

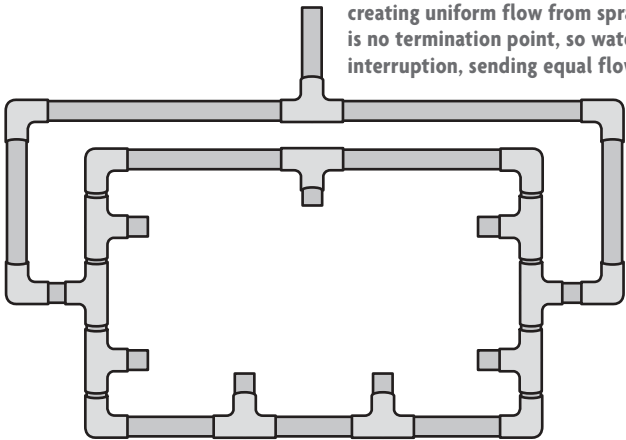

Manifold plumbing: This configuration also provides even distribution to each nozzle by symmetrically splitting the flow. Leave 6 to 12 inches on each end so water doesn't stop abruptly and create turbulence.

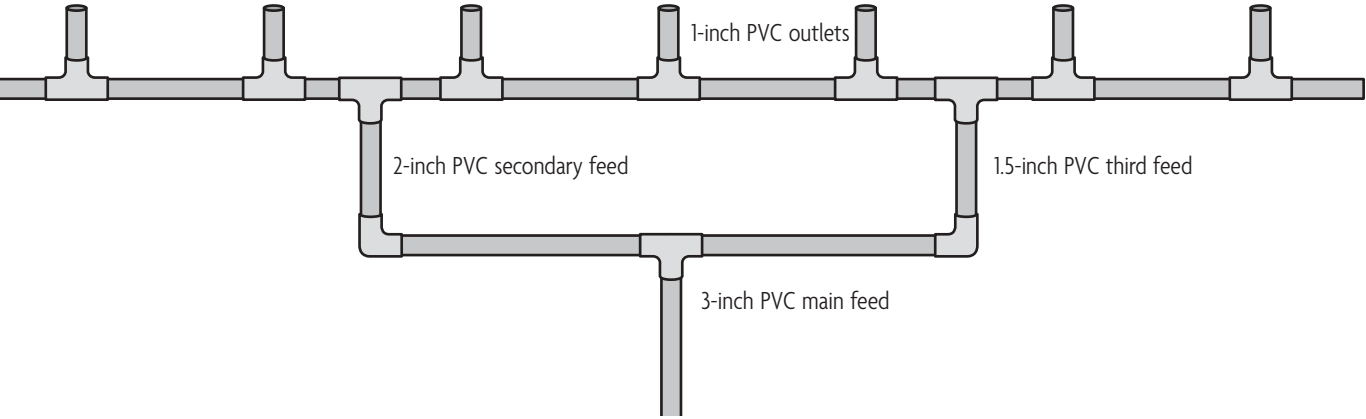


ILLUSTRATION COURTESY STEVE GUTAI / JANDY